

# CT-S300 Casiotone

## Quick Start Guide

After reading this document, keep it in a safe place along with the warranty certificate. Be sure to read the "Safety Precautions" in the separate "READ THIS!" sheet, and use the product correctly.

For more detailed information about the product and its operation, visit the CASIO website by accessing the nearby QR code or the URL below.  
Available Information: User's Guide, Music Scores, etc.  
<https://support.casio.com/global/en/emi/manual/CT-S300/>



### Included Accessories

- Music Stand
  - Leaflets
    - READ THIS! Sheet
    - Other (Warranty, etc.)
- Items included as accessories are subject to change without notice.

## Preparation

 
### Preparing a Power Supply

#### Using the AC Adaptor


- 1 Connect the AC adaptor as shown in the nearby illustration.

#### Using Batteries


- 1 Open
- 2 Load six AA-size batteries.
- 3 Close
- 4 Specify the battery type.
  - See "Configuring Function Settings" on the reverse side of this sheet.

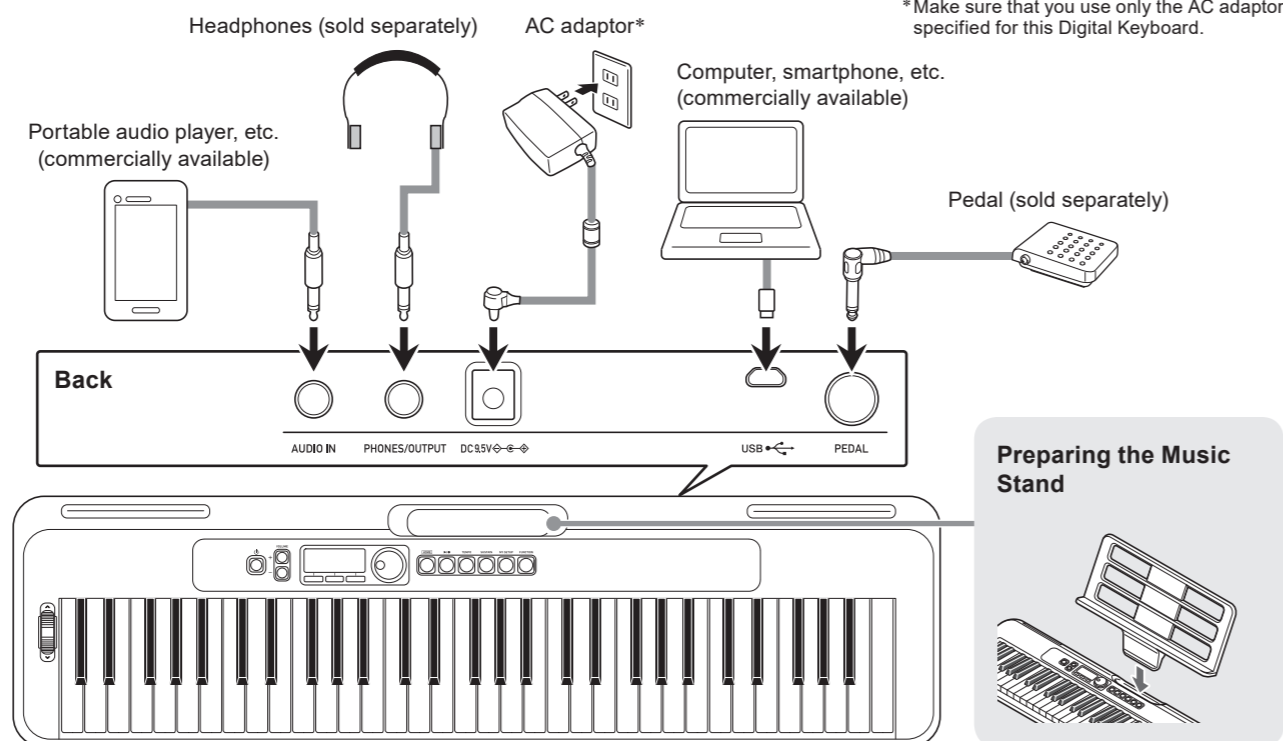

### Preparing the Music Stand

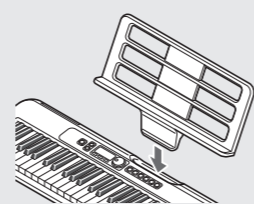 


## Selecting a Tone

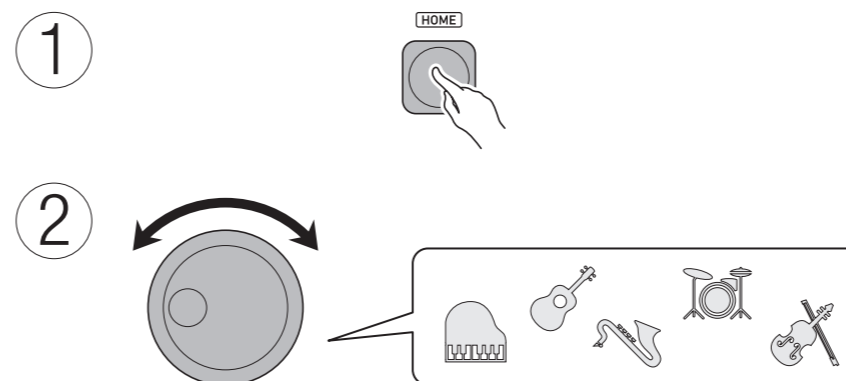 


| Category        | No.       | Category   | No.       |
|-----------------|-----------|------------|-----------|
| PIANO           | 001 - 014 | BRASS      | 121 - 140 |
| ELECTRIC PIANO  | 015 - 028 | REED/PIPE  | 141 - 165 |
| CHROMATIC PERC. | 029 - 042 | SYNTH-LEAD | 166 - 202 |
| ORGAN           | 043 - 064 | SYNTH-PAD  | 203 - 242 |
| GUITAR          | 065 - 078 | INDIAN     | 243 - 253 |
| BASS            | 079 - 088 | ETHNIC     | 254 - 266 |
| STR/ORCHESTRA   | 089 - 100 | GM TONES   | 267 - 394 |
| ENSEMBLE        | 101 - 120 | DRUM SET   | 395 - 400 |

## Saving and Loading Instrument Settings

 
### To save to My Setups

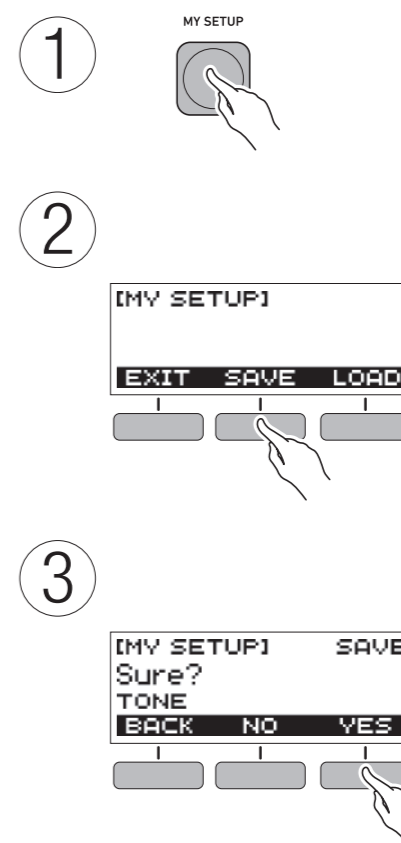

### To load from My Setups

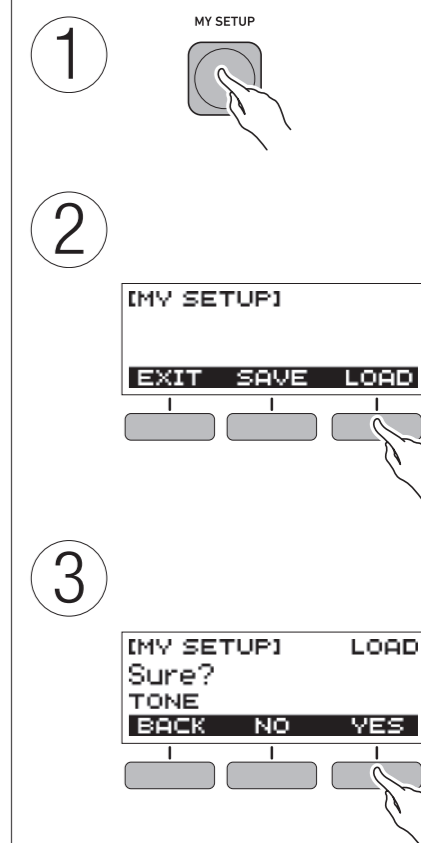 


## Basic Operation

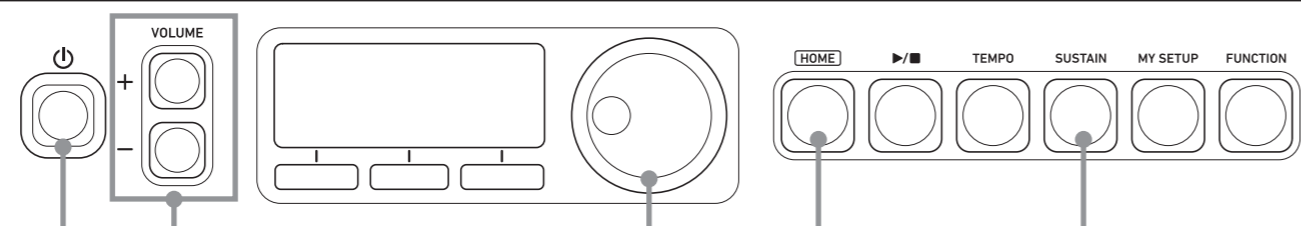 


- Power button**  
Press to turn on power. To turn off power, hold down this button until the display goes blank.
- Volume buttons**  
Use to adjust the overall volume level range.
- Dial**  
Rotate to change a displayed number or value.
- HOME button**  
Press to return to the Home (tone selection) screen.
- SUSTAIN button**  
Pressing causes notes to be sustained longer when keyboard keys are released. Pressing again returns to unsustained notes.

- Pitch Bend Wheel**  
Rotate for a smooth change in the pitch of a note that is sounding.
- Auto Power Off**  
Automatically turns off power after 30 minutes of non-use. (On, Off switchable)
- Pedal**  
Sustains notes played while the pedal is depressed. Even if the keys played are released, notes are sustained as if the keys remain pressed, until the pedal is released.
- Touch Response**  
Pressing a key harder produces louder sound, while a softer key press produces softer sound.


## Sounding the Metronome

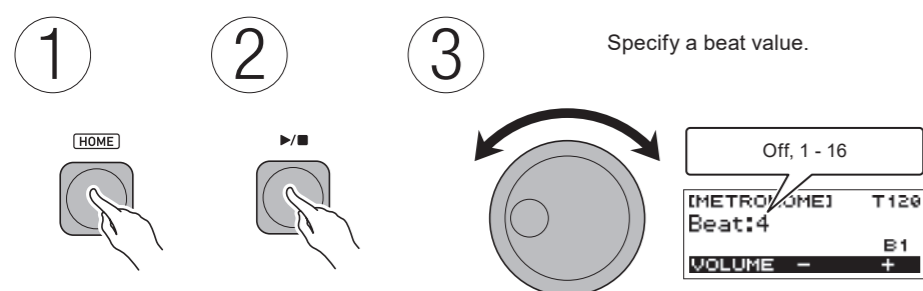 

## Changing the Tempo

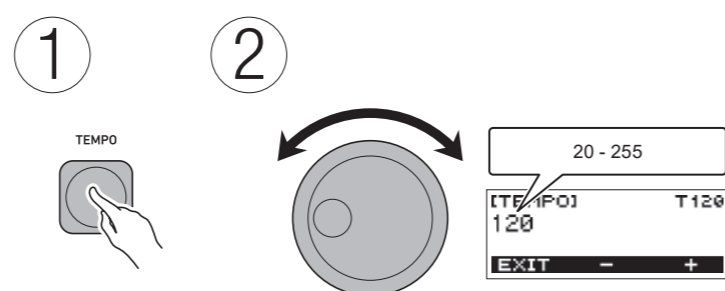 


## Playing a Built-in Song

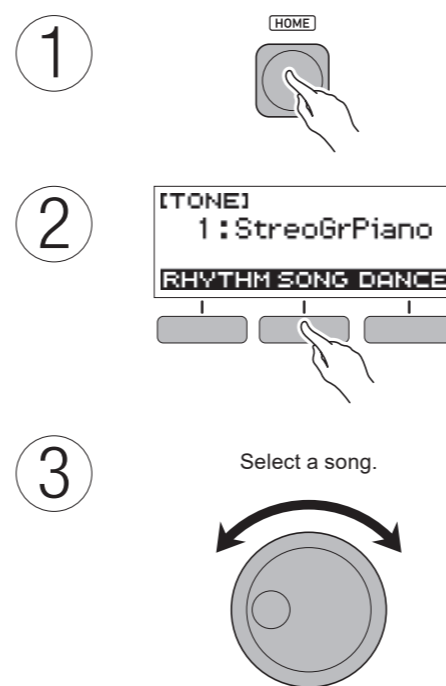 


| Category       | No.     |
|----------------|---------|
| PIANO/CLASSICS | 01 - 30 |
| EVENT          | 31 - 35 |
| WORLD          | 36 - 60 |


### To play the song

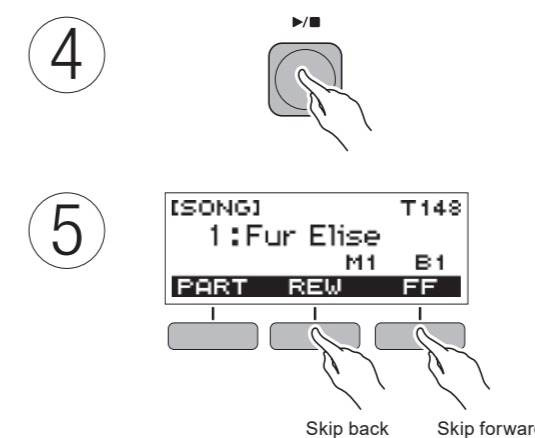 




### To practice a particular part

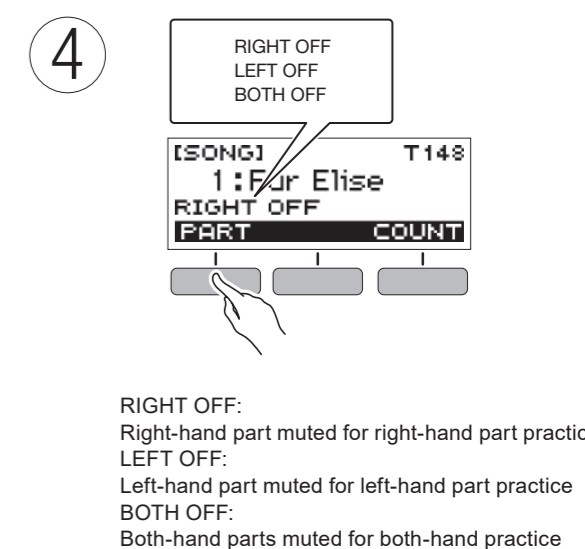 


### To sound a count

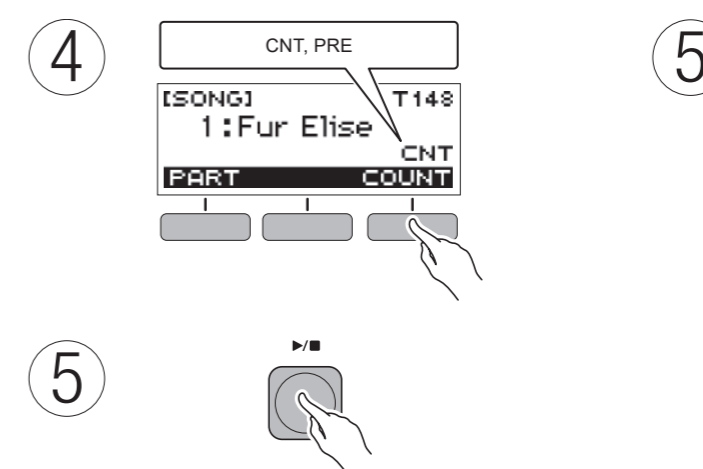 

## Enjoying DJ Play in the Dance Music Mode

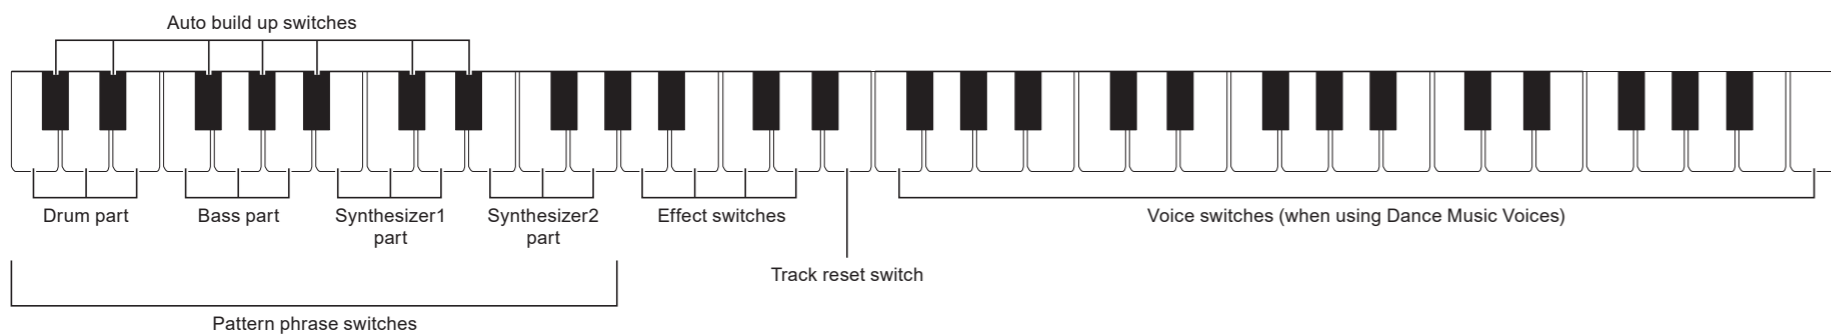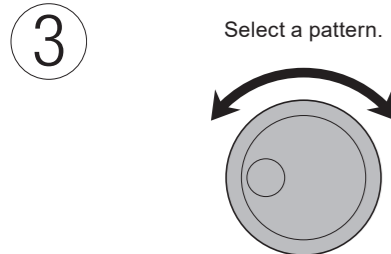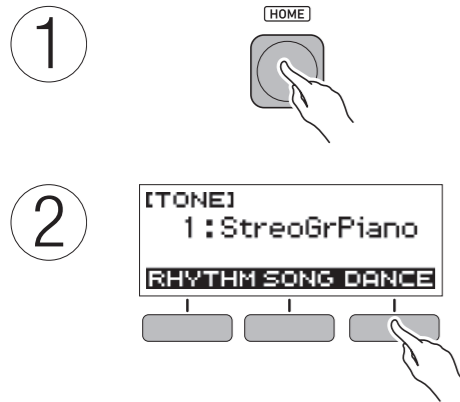   


4 Press Pattern phrase switches.

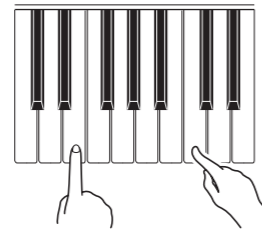 


- Pressing the phrase switch of a phrase that is sounding stops the phrase.
- By selecting phrases for each part, you can perform dance music incorporating various combinations.
- You can also start or stop phrase play by pressing the ►/■ button.

| Category | No.     |
|----------|---------|
| EDM      | 01 - 35 |
| HOUSE    | 36 - 45 |
| HIP-HOP  | 46 - 50 |


### To use a Dance Music voice

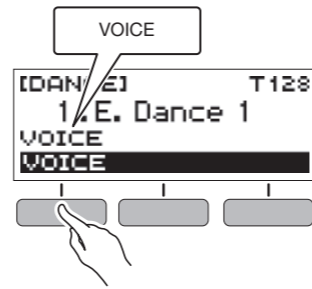 


Press a Voice Switch.

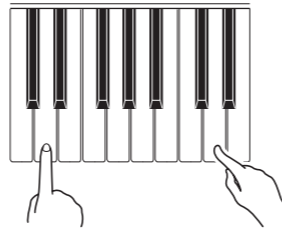 

## Configuring Function Settings

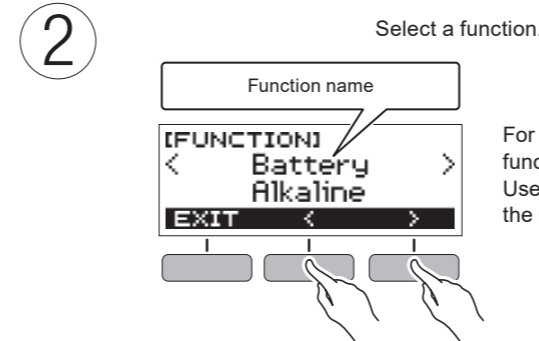 

 
For information about functions, refer to the User's Guide available on the CASIO Website.

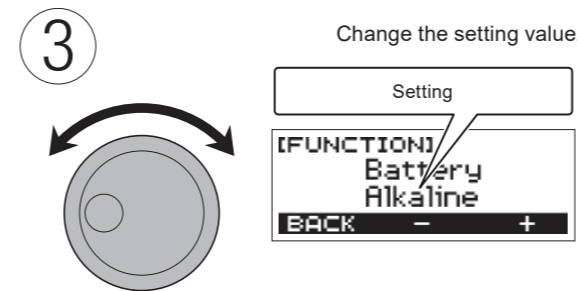



Example: To specify the battery type  
Alkaline: Alkaline batteries  
Ni-MH: Rechargeable nickel metal hydride batteries

### To initialize a setting

 
Select "Initialize".

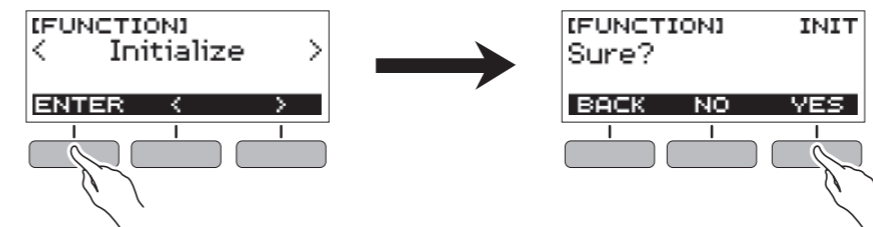


## Playing a Rhythm

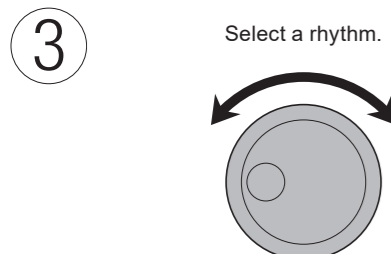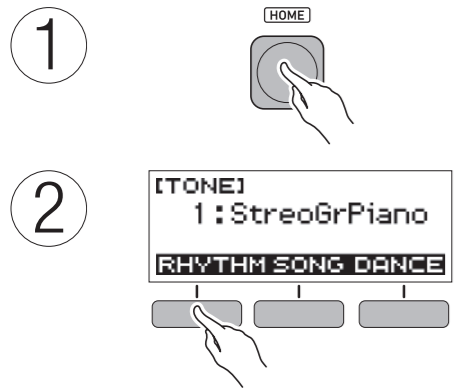  


### To change the pattern

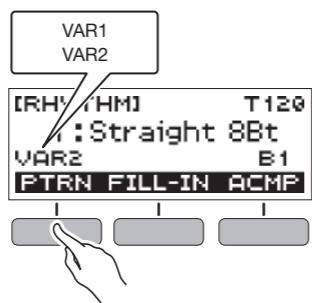 

### To insert a fill-in

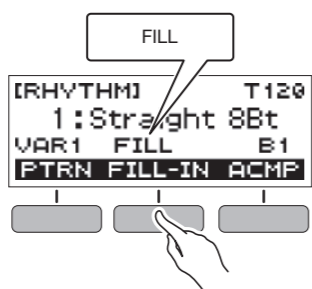 

### To sound the accompaniment pattern with chords

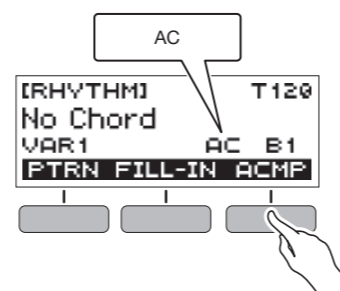 


Use the chord input keyboard to play chords.



### Chord Progression Example

 Input the following chords for the progression:  
C → F → C → G.  
Inputting a chord when there is a change from one measure to the next is recommended.

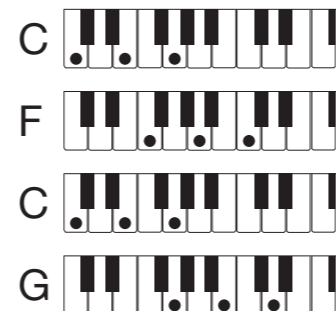

## Product Specifications

- Model:** CT-S300
- Keyboard:** 61 keys
- Touch Response:** 2 levels, Off
- Maximum polyphony:** 48 tones
- Sound Source:** 400 preset tones (1 stereo piano tone)
- Effects:** Reverb (10 types, Off)
- Metronome:** Bell sound off, 1 to 16 beats; Tempo Range: 20 to 255
- Song Bank:** 60 preset songs; Part Off Function: Left-hand, right-hand, both-hand
- Auto Accompaniment:** 77 preset rhythms, 77 one-touch presets, INTRO, ENDING; chord input mode switching
- Dance Music Mode:** 50 preset patterns; Dance Music effects
- Demo Function:** Looped play of all built-in Song Bank songs (60 songs)
- Function Volume Adjustment:** Metronome, Rhythm, Song, Dance Music
- Other Functions:** Transpose (±1 octave; -12 to 0 to +12 semitones), Tuning (A4 = 415.5 to 465.9 Hz; Default = 440.0 Hz)
- APP Function:** iOS, Android (Connects via USB port)
- Pitch Bend Wheel:** 0 to 12 semitones
- Input/Output Terminals:** PHONES/OUTPUT jack: Stereo mini jack (3.5mm); AUDIO IN jack: Stereo mini jack (3.5mm) (Input impedance: 10kΩ, Input sensitivity: 200mV); USB port: micro B; PEDAL jack: Standard jack (6.3mm) (Pedal sustain, sostenuto, soft, start/stop)
- Power Jack:** 9.5VDC
- Power Supply:** 2-Way Power; 6 AA-size alkaline batteries or AA-size rechargeable nickel metal hydride batteries, Continuous operation: approximately 19 hours (alkaline batteries), approximately 15 hours (rechargeable nickel metal hydride batteries)\*, actual battery life may be shorter depending on battery type, performance style, or operation environment; AD-E95100L AC adaptor (JEITA Standard, with unified polarity plug), 30-minute Auto Power Off (Can be disabled.)
- \* Measured values while using eneloop batteries. eneloop is a trademark of Panasonic Corporation.
- Speakers:** 13 cm × 6 cm (oval) × 2 (Output: 2.5W+2.5W)
- Power consumption:** 9.5V --- 5.5W
- LCD:** Adjustable contrast
- Dimensions:** 93.0(W) × 25.6(D) × 7.3(H) cm (36 5/8 × 10 1/16 × 2 7/8 inch)
- Weight:** Approximately 3.3kg (7.3 lbs) (Excluding batteries)

Specifications and designs are subject to change without notice.

- Any reproduction of the contents of this manual, either in part or its entirety, is prohibited. Except for your own, personal use, any other use of the contents of this manual without the consent of CASIO is prohibited under copyright laws.
- IN NO EVENT SHALL CASIO BE LIABLE FOR ANY DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION, LOSS OF INFORMATION) ARISING OUT OF THE USE OF OR INABILITY TO USE THIS MANUAL OR PRODUCT, EVEN IF CASIO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
- The contents of this manual are subject to change without notice.
- Company and product names used in this manual may be registered trademarks of others.

### Declaration of Conformity

Model Number: CT-S300  
Trade Name: CASIO COMPUTER CO., LTD.  
Responsible party: CASIO AMERICA, INC.  
Address: 570 MT. PLEASANT AVENUE, DOVER, NEW JERSEY 07801  
Telephone number: 973-361-5400  
This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

A labels rating is affixed to the bottom of the product.

| Category | No.       | Category | No.       | Category      | No.       |
|----------|-----------|----------|-----------|---------------|-----------|
| 8 BEAT   | 001 - 002 | ROCK     | 017 - 020 | WORLD         | 059 - 073 |
| 16 BEAT  | 003 - 005 | JAZZ     | 021 - 024 | VARIOUS       | 074 - 075 |
| BALLAD   | 006 - 009 | EUROPEAN | 025 - 032 | PIANO RHYTHMS | 076 - 077 |
| DANCE    | 010 - 013 | LATIN    | 033 - 044 |               |           |
| POPS     | 014 - 016 | INDIAN   | 045 - 058 |               |           |

**CASIO COMPUTER CO., LTD.**  
6-2, Hon-machi 1-chome  
Shibuya-ku, Tokyo 151-8543, Japan