

User's Guide 3465

Congratulations upon your selection of this CASIO watch.

Note that CASIO COMPUTER CO., LTD. assumes no responsibility for any damage or loss suffered by you or any third party arising through the use of your watch or its malfunction.

Important!

- This manual provides a brief overview of your watch.

E-1

For a full Operation Guide and Q&A information about this product, go to the website below.
<https://world.casio.com/manual/wat/>



Contents

Timekeeping..... E-4
To set the time and date..... E-4
Mode Selection and Operations E-7
Specifications..... E-11

E-2

E-3

Timekeeping

 
- Be sure to set a city code for your Home City before using this watch.
- To view the current Home City code setting, press (A) while in the Timekeeping Mode.

To set the time and date



1. In the Timekeeping Mode, hold down (A) until the seconds start to flash, which indicates the setting screen.

2. Press (C) to move the flashing in the sequence shown below to select a setting.



E-4

E-5

3. Use (B) and (D) to change the selected setting.


Screen	This setting item:	Operation
50	Reset the seconds to 00 • 30 to 59 seconds: Adds 1 to minutes	Press (D).
TYO	Change the city code	Use (D) (East) and (B) (West).
OF	Toggle between Daylight Saving Time (On) and Standard Time (OF)	Press (D).
10:58	Change the hour or minute	Use (D) (+) and (B) (-).
12H	Toggle between 12-hour (12H) and 24-hour (24H) timekeeping	Press (D).
20 19	Change the year, month, or day	Use (D) (+) and (B) (-).

4. Press (A) to exit the setting screen.

E-6

Mode Selection and Operations

 
- Press (C) to change the mode.

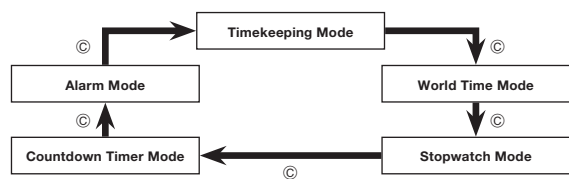

E-8


E-9

 Timekeeping Mode

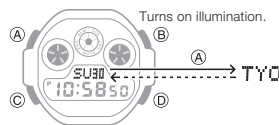


- (A): Displays the home city code.

 World Time Mode

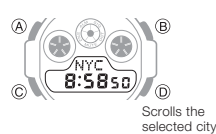

- Holding down (A) for about one second will toggle summer time (DST) between on and off.

 Stopwatch Mode

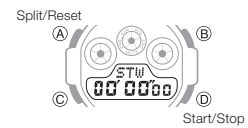


Countdown Timer Mode



- (A): Displays timer time setting screen.
- (C): Selects minutes or seconds.
- (B), (D): Use to change the selected setting.
- (A): Exits the setting screen.

 Alarm Mode

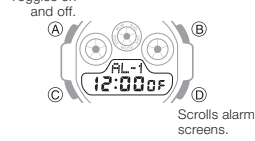

- (A): Displays alarm time setting screen.
- (C): Selects hour or minutes.
- (B), (D): Use to change the selected setting.
- (A): Exits the setting screen.

Specifications

- Accuracy at normal temperature:** ±15 seconds a month
- Timekeeping:** Hour, minutes, seconds, a.m./p.m. (P), day, day of the week
- Time format: 12-hour and 24-hour
- Calendar system: Full Auto-calendar pre-programmed from the year 2000 to 2099
- Other: Home City code (can be assigned one of 48 city codes); Standard Time/Daylight Saving Time (summer time)
- World Time:** 48 cities (29 time zones)
- Other: Daylight Saving Time/Standard Time
- Stopwatch:**
 - Measuring unit: 1/100 seconds
 - Measuring capacity: 59'59.99"
 - Measuring modes: Elapsed time, split time, two finishes

E-10

E-11

Countdown Timer:

- Measuring unit: 1 second
- Countdown range: 1 minute to 24 hours
- Setting unit: 1 minute
- Time up alert duration: 10 seconds

Alarms: 5 Daily alarms (with 1 snooze alarm); Hourly Time Signal

Illumination: EL Backlight (electro-luminescent panel); Selectable illumination duration

Other: Button operation tone on/off

 
Battery: One lithium battery (Type: CR2025)

- Approximate battery operating time: 5 years under the following conditions:
 - 1 illumination operation (1.5 seconds) per day
 - 10 seconds of alarm operation per day

Frequent use of illumination runs down the battery.

Specifications are subject to change without notice.

E-12

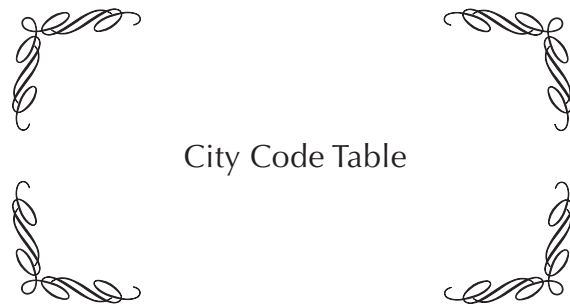

City Code Table

L-1

City Code Table

City Code	City	UTC Offset/ GMT Differential
PPG	Pago Pago	-11
HNL	Honolulu	-10
ANC	Anchorage	-9
YVR	Vancouver	-8
SFO	San Francisco	-8
LAX	Los Angeles	-8
DEN	Denver	-7
MEX	Mexico City	-6
CHI	Chicago	-6
MIA	Miami	-5
NYC	New York	-5
CCS	Caracas	-4
YYT	St. Johns	-3.5
RIO	Rio De Janeiro	-3
RAI	Praia	-1

L-2

City Code	City	UTC Offset/ GMT Differential
LIS	Lisbon	0
LON	London	0
BCN	Barcelona	0
PAR	Paris	0
MIL	Milan	+1
ROM	Rome	+1
BER	Berlin	+1
ATH	Athens	+1
JNB	Johannesburg	+1
IST	Istanbul	+2
CAI	Cairo	+2
JRS	Jerusalem	+2
MOW	Moscow	+3
JED	Jeddah	+3
THR	Tehran	+3.5

City Code	City	UTC Offset/ GMT Differential
DXB	Dubai	+4
KBL	Kabul	+4.5
KHI	Karachi	+4.5
MLE	Male	+5
DEL	Delhi	+5.5
DAC	Dhaka	+6
RGN	Yangon	+6.5
BKK	Bangkok	+7
SIN	Singapore	+7
HKG	Hong Kong	+8
BJS	Beijing	+8
SEL	Seoul	+9
TYO	Tokyo	+9
ADL	Adelaide	+9.5

City Code	City	UTC Offset/ GMT Differential
GUM	Guam	+10
SYD	Sydney	+10
NOU	Noumea	+11
WLG	Wellington	+12

- Based on data as of January 2018.
- The rules governing global times (UTC offset and GMT differential) and summer time are determined by each individual country.

L-3