

# User's Guide 5229 5518

ENGLISH

Congratulations upon your selection of this CASIO watch.

### Important!

- This manual provides a brief overview of your watch.

E-1

For a full Operation Guide and Q&A information about this product, go to the website below.


<http://world.casio.com/manual/wat/>



## Configuring Home City, Time and Date Settings

- Configure Home City and summer time settings first. After that, configure time and date settings.

1. In the Timekeeping Mode, hold down (A) for about three seconds until the currently selected city code flashes in the right digital dial. This is the setting mode.
2. Press (C) to move the flashing in the sequence shown below to select a setting.



E-2

E-3

3. Use (B) and (D) to change the selected setting.

Screen:	To do this:	Do this:
TYO	Change the city code	Use (D) (east) and (B) (west).
OFF	Toggle the DST setting between Daylight Saving Time (On) and Standard Time (OFF).	Press (D).
12H	Toggle between 12-hour (12H) and 24-hour (24H) timekeeping	Press (D).
50	Reset the seconds to 00	Press (D).
PM 10:00	Change the hour and minutes	Use (D) (+) and (B) (-).
2017 6.30	Change the year, month, or day	


E-4

E-5

4. Press (A) to exit the setting mode.

## Mode Selection and Operations

- Press (C) to change the mode.

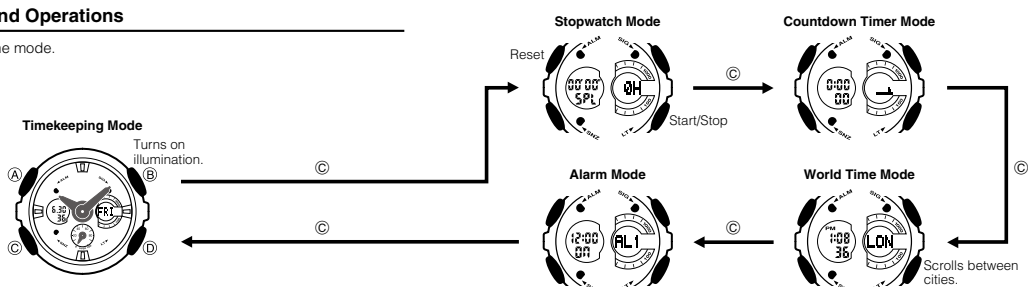

E-6

E-7

## Misaligned Hands

Exposing the watch to strong magnetism or subjecting it to impact can cause speed, hour and minute hands to go out of alignment. If this happens, refer to "Hand Home Position Correction" in the Operation Guide available from the CASIO website.

E-8

## Specifications

**Accuracy at normal temperature:** ± 15 seconds a month

**Digital Timekeeping:** Hour, minutes, seconds, p.m. (PM), month, day, day of the week

Time format: 12-hour and 24-hour

Calendar system: Full Auto-calendar pre-programmed from the year 2000 to 2099

Other: Home City code (can be assigned one of 48 city codes); Standard Time / Daylight Saving Time (summer time)

**Analog Timekeeping:** Hour, minutes (hand moves every 20 seconds)

### Stopwatch:

Measuring unit: 1/1000 seconds

Measuring capacity: 99:59'59.999"

Measuring accuracy: ±0.0006%

Measuring modes: Elapsed time, Lap time, Split time

Other: Speed

E-9

**Countdown Timer:**

Measuring unit: 1 second  
 Input range: 1 minute to 24 hours (1-minute increments)  
 Other: Auto-repeat timing

**World Time:** 48 cities (29 time zones)

Other: Daylight Saving Time/Standard Time; Home City/World Time City Swapping

**Alarms:** 5 daily alarms (with one snooze alarm); Hourly Time Signal

**Illumination:** LED (light-emitting diode); Auto Light Switch; Selectable illumination duration

**Battery:** One lithium battery (Type: CR1220)

Approximate Battery Life: 3 years on type CR1220  
 (10 seconds of alarm operation per day, one illumination operation (1.5 seconds) per day)

Specifications are subject to change without notice.

E-10



## City Code Table

L-1

**City Code Table**

City Code	City	UTC Offset/ GMT Differential
PPG	Pago Pago	-11
HNL	Honolulu	-10
ANC	Anchorage	-9
YVR	Vancouver	-8
LAX	Los Angeles	-7
YEA	Edmonton	-7
DEN	Denver	-6
MEX	Mexico City	-6
CHI	Chicago	-5
MIA	Miami	-5
YTO	Toronto	-5
NYC	New York	-5

L-2

City Code	City	UTC Offset/ GMT Differential
SCL	Santiago	-4
YHZ	Halifax	-3.5
YYT	St. Johns	-3.5
RIO	Rio De Janeiro	-3
RAI	Praia	-1
UTC		
LIS	Lisbon	0
LON	London	0
MAD	Madrid	+1
PAR	Paris	+1
ROM	Rome	+1
BER	Berlin	+1
STO	Stockholm	+1

City Code	City	UTC Offset/ GMT Differential
ATH	Athens	+2
CAI	Cairo	+2
JRS	Jerusalem	+2
MOW	Moscow	+3
JED	Jeddah	+3
THR	Tehran	+3.5
DXB	Dubai	+4
KBL	Kabul	+4.5
KHI	Karachi	+5
DEL	Delhi	+5.5
DAC	Dhaka	+6
RGN	Yangon	+6.5

- Based on data as of January 2016.
- The rules governing global times (UTC offset and GMT differential) and summer time are determined by each individual country.

L-3

City Code	City	UTC Offset/ GMT Differential
BKK	Bangkok	+7
SIN	Singapore	+7
HKG	Hong Kong	+8
BJS	Beijing	+8
TPE	Taipei	+8
SEL	Seoul	+9
TYO	Tokyo	+9
ADL	Adelaide	+9.5
GUM	Guam	+10
SYD	Sydney	+10
NOU	Noumea	+11
WLG	Wellington	+12